


FullOceans TRACKER

USER GUIDE

Activate your tracker

Close to a windows, or in an open area, shake the tracker, then place the magnet on the front side.
 Wait the lightning of the LED in Green.
 Remove the magnet

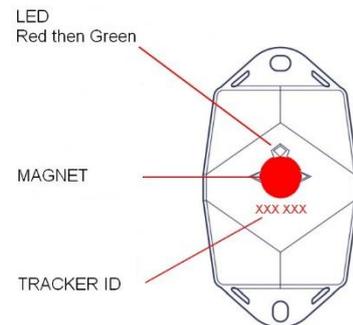


Installation

- Install the tracker in vertical position
- Place the tracker in the highest possible position
- Side with logo outward facing
- Ensure that the tracker has a clear view to the sky
- Be sure to use UV resistant materials for fixing the tracker (Self-Locking Nylon Cable)

Management website: <http://tracker.fulloceans.com>

Buoy overview

- **Status:** Name, Image, ID, Third party id, Organization, Tags, Last transmission, Battery monitoring, Geozone, Location on map
- **Locations:** Latest positions based on GPS (position every 4 hours for standard setting)
- **Orientation events:** Timeline of unusual swinging of the buoy. More than 50 degrees.
- **All asset alerts:** List of all alerts

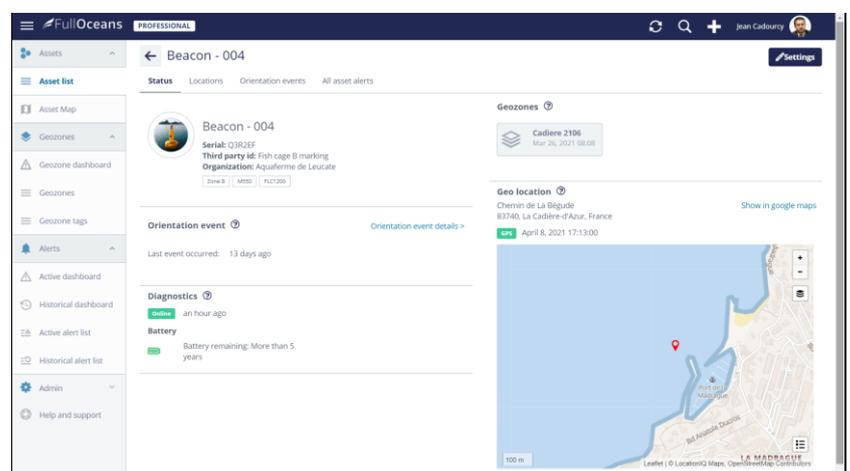

Online administration

Configure your trackers

- ✓ Menu ADMIN / Asset trackers

Customize your trackers and verify configuration and subscription period

Available parameters

- Name
- Image
- Icon (for maps)
- Third party id (other name)
- Tags: buoy model, type of lanterns,

Add a Geozones

- ✓ Menu ADMIN / Geozones

Define your Geozones to prepare your alerts.
Once a buoy has been installed, define a circle in which the buoy must stay.
We recommend to define a circle of corresponding to your mooring line length and depth.
Suggestion Geozone radius = 2.3 x Depth

Available parameters (circle geozone)

- Name
- Location: Center and Radius
- Image
- Tags: Additional information on the Geozone
- Third party id (other name)
- Colors

Create an Alert

- ✓ Menu ADMIN / Alert rules

Add alert rules of different types:

- **Geozone alert:** buoy leaving or entering a Geozone
- **Diagnostic alert:** low battery or offline warning
- **Orientation alert:** unusual swinging of a buoy (more than 50 degrees)

Note1: for an optimized configuration of Geozone alert, create one alert per buoy (buoy leaving a specific zone).

Note2: for Diagnostic and Orientation, create one alter and select all your trackers (assets).

Parameters:

- Title
- Description
- Severity
- Monitored assets (buoy tracker)
- Geozone(s)
- Notification (email)